



**TABLE OF CONTENT**

Clip system .....2  
Removing Caps ..... 3  
Installing Hooks ..... 3  
Threading buckles & Straps ..... 4  
Attaching & Releasing Buckles ..... 5

Read the next two pages no matter which system you have

Tighten Straps ..... 6  
Locking Buckles ..... 7

### THE CLIP SYSTEM



To attach the screen just slide the clip over the carriage head bolt and snug down the strap. If your system has the bolts screwed in flush with the surface, unscrew the bolt about 1/8" then slide the clip on.


If your system has the bolt removed and the inserts secured with covers, remove the cover and install the carriage head bolts. Screw down to within 1/8" of the surface. Slide the clip over the bolt and snug down the strap.

See the page on tightening straps and locking buckles to ensure your system performs to specification



**MAKE SURE THE  
CLIP RESTS ON  
THE SQUARE  
SHANK BEHIND  
THE ROUND HEAD.**

**THE CLIP CAN NOT  
REST ON THE  
THREADS.**

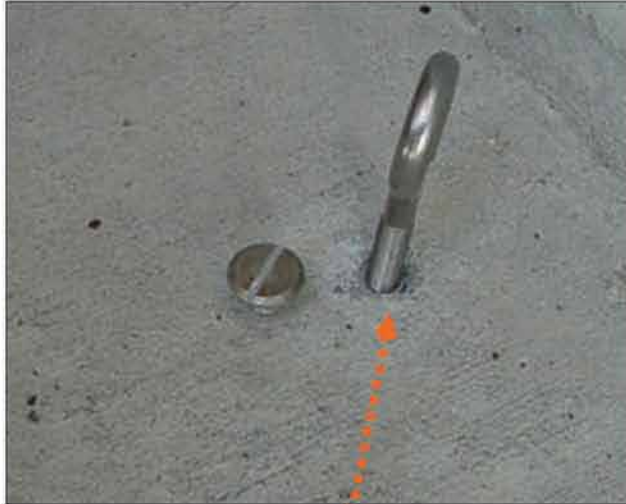

### REMOVING STAINLESS STEEL CAPS & INSTALLING HOOKS

If you are using the stainless steel caps, use a standard flat head screwdriver to remove them. If you are using the white nylon bolts, use a #3 Phillips head screwdriver for bolt removal.

Once bolts are removed, install the eye hooks into the anchor in the ground. 4-5 full turns with the eye hook will be enough



### THREADING THE BUCKLES & STRAPS



The strap enters the buckles from the back into the top slot. It then continues down the front of the buckle and into the bottom slot.





### ATTACHING THE BOTTOM BUCKLES

The buckles on the bottom of screens are deployed by looping the strap through the eye bolt, up behind the buckle, through the top slot from behind, then down through the bottom slot from the front side. The straps may be easily tightened by holding the strap and stepping on it as shown below.



### RELEASING BOTTOM BUCKLES AND STRAPS

Armor Screen's unique buckle is specifically designed to hold and not release under wet and cycling wind loads.

To release the tension on the buckle and strap, simply give a slight tug on the buckle similar to releasing a safety belt on an airplane seat

## TIGHTENING STRAPS



Repeat This process until tight. Then screen should still have some play after tightening.

### LOCKING THE BUCKLE



1. Tighten the buckle and strap securely.
2. Lift the tail end of the strap up and bend it so it will go down the top slot in the buckle.
3. The strap should look like this as it goes through the buckle
4. Pull the strap down securely from in back of the buckle so that it is tight and looks like this picture. You are done.

It is extremely important to lock the buckle like this. High pulsating winds will loosen unlocked buckles!

